









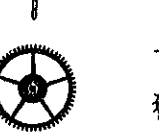


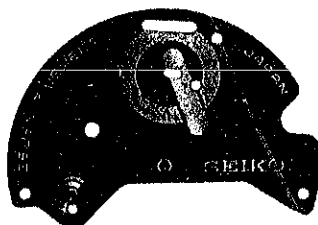



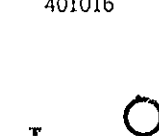
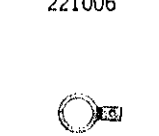

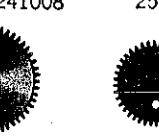
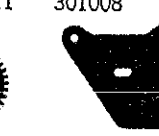
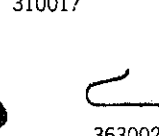
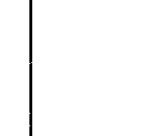
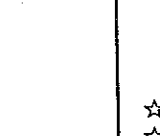
**Cal. 8800D**


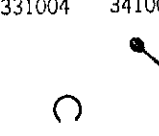
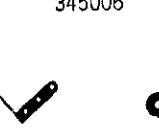
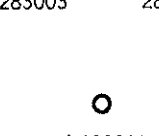
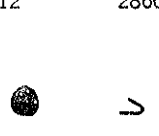
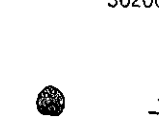


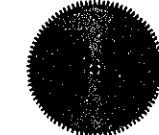
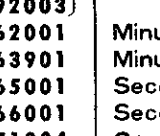
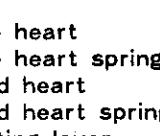

### Characteristics


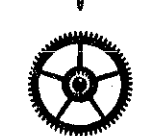



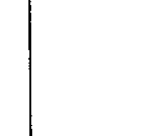

Stopwatch (Accumulated)  
 Casing diameter: 40.25φmm  
 Maximum height: 7.55 mm  
 Vibrations per hour: 36,000  
 "Diashock" Shock Resistant Device







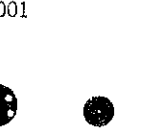
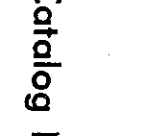
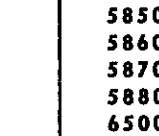




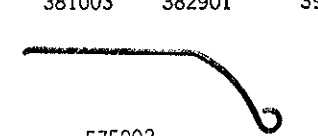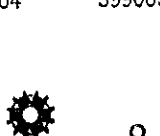

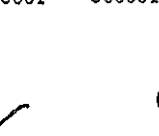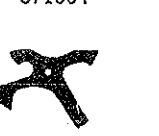
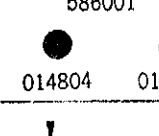
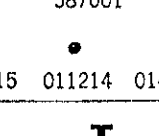
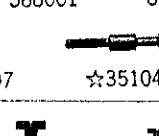
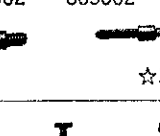
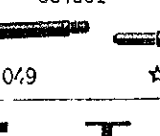
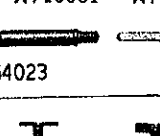
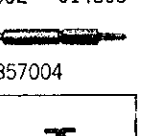




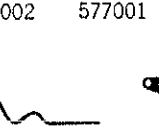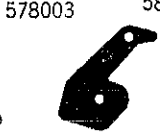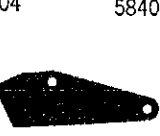
























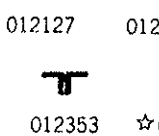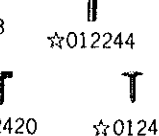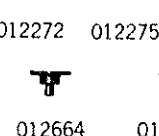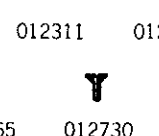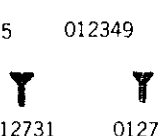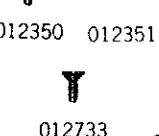






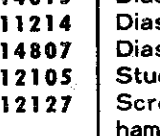
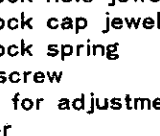











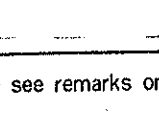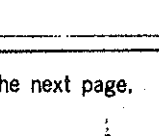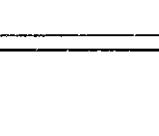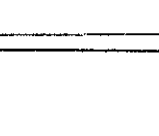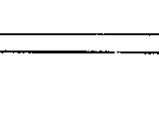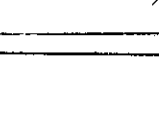

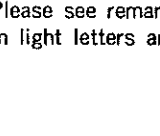


Catalog No.

Calibre No.	Jewels	Style Name	
<b>8800D</b>	<b>7j</b>		
PART NO.	LIST OF MATERIALS	PART NO.	LIST OF MATERIALS
112012	Barrel & train-wheel bridge	012223	Crown wheel guard screw
151001	Escape wheel bridge	012223	Pillar wheel jumper screw
161003	Pallet cock	012223	Hammer guard screw (Cheese-head screw)
171026	Balance cock	☆012244	Winding stem screw
197001	Winding stem cock	☆012272	
205006	Complete barrel with arbor	012275	Escape wheel bridge screw
213005	Barrel arbor	012275	Pallet cock screw
221006	Center wheel & pinion	012275	Second-setting lever screw
231004	Third wheel & pinion	012311	Pillar wheel screw
241008	Fourth wheel & pinion	012345	Hammer spring screw
251011	Escape wheel & pinion	012349	Ratchet wheel screw
283003	Winding pinion	012350	Winding stem cock screw
285012	Ratchet wheel	012351	Barrel & train-wheel bridge screw
286002	Sliding crown wheel	012351	Balance cock screw
301008	Jewelled pallet fork & staff	012352	Balance stop lever screw
310017	Balance complete with stud	012353	Balance stop lever spring screw
315006	Balance staff	012353	Fly-back lever spring screw
331004	Roller with jewel	☆012420	Dial screw
341006	Regulator	☆012425	
345006	Stud holder		
☆351048	Winding stem		
☆351049			012664 Click screw
☆354023			012665 Heart spring screw
☆357004			012730 Casing clamp screw
362002		Crown wheel guard	012731
363002	Sliding crown wheel spring		
381003	Click	012732	Operating lever guard screw
382901	Click spring	012733	Operating lever spring guard screw
391004	Second-setting lever	013107	Tube for balance stop lever screw
399005	Casing clamp	013120	Tube for balance stop lever spring screw
401016	Mainspring (self-greasing)	013120	Tube for hammer spring screw
☆492001	Balance cock washer	013120	Tube for fly-back lever spring screw
☆492002			013120 Tube for operating lever spring guard screw
☆492003			013177 Tube for barrel & train-wheel bridge screw (short)
562001	Minute heart		
563901	Minute heart spring	013178	Tube for barrel & train-wheel bridge screw (Operating lever spring pin)
565001	Second heart		
566001	Second heart spring	013179	Tube for escape wheel bridge screw
571004	Operating lever	013179	Tube for pallet cock screw
575002	Operating lever spring	013180	Tube for balance cock screw
576002	Pillar wheel	013181	Tube for winding stem cock screw (short)
577001	Pillar wheel ring	013182	Tube for crown wheel guard screw
578003	Pillar wheel jumper	013183	Tube for dial screw
581004	Balance stop lever	013184	Tube for fly-back lever screw
584002	Balance stop lever spring	013185	Tube for pillar wheel screw
585001	Hammer	013188	Tube for winding stem cock screw (long) (Tube for operating lever spring guard screw)
586001	Hammer spring		
587001	Fly-back lever	013189	Tube for barrel & train-wheel bridge screw (Tube for crown wheel guard screw)
588001	Fly-back lever spring		
650002	Operating lever guard		
663002	Hammer guard		
664001	Operating lever spring guard		
☆715001	Adjustment disk of hammer		
☆715002			
014803	Diashock upper frame		
014804	Diashock lower frame		
014815	Diashock hole jewel with frame		
011214	Diashock cap jewel		
014807	Diashock spring		
012105	Stud screw		
012127	Screw for adjustment disk of hammer		

Calibre No. <b>8800D</b>	Jewels <b>7j</b>	Style Name
-----------------------------	---------------------	------------

**Remarks :**

**Winding stem**


- ☆ 351048..... for small size case, non-water and splash resistant (outer diameter 48.00  $\phi$  mm)
- ☆ 351049..... for large size case, non-water and splash resistant (outer diameter 57.00  $\phi$  mm)
- ☆ 354023..... for splash resistant case
- ☆ 357004..... for water resistant case

**Balance cock washer** ----- three different types of thickness -----

- ☆ 492001..... 0.015 mm thickness
- ☆ 492002..... 0.025 mm thickness
- ☆ 492003..... 0.035 mm thickness

**Adjustment disk of hammer** ----- Confirm the marking (a dot) on adjustment disk of hammer. -----

- ☆ 715001..... one dot on the disk surface
- ☆ 715002..... two dots on the disk surface

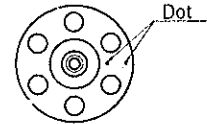

**Winding stem screw**

- ☆ 012244..... for large size case, non-water and splash resistant (outer diameter 57.00  $\phi$  mm)
- ☆ 012272..... for small size case of non-water and splash resistant (outer diameter 48.00  $\phi$  mm), splash resistant case, water resistant case

**Dial screw**

- ☆ 012420 (silver color)..... for white dial
- ☆ 012425 (black color)..... for black dial