



Cal. 8800F



171028
205007
4019C5
566002
585002
586003



587002

Characteristics


Stopwatch (Accumulated)
 Casing diameter: 40.25φmm
 Maximum height: 7.55 mm
 Vibrations per hour: 36,000
 "Diashock" Shock Resistant Device

Remarks:

Winding stem
 ☆ 351048 Used for the case having an outside diameter of 48.00φ mm.
 ☆ 351049 Used for the case having an outside diameter of 57.00φ mm.

Balance cock washer ——— Please measure the thickness ———
 ☆ 492001 0.015 mm thickness
 ☆ 492002 0.025 mm thickness
 ☆ 492003 0.035 mm thickness

Adjustment disk of hammer ——— Make sure of the number of dots on the adjustment disk surface.
 ☆ 715001 One dot on the disk surface
 ☆ 715002 Two dots on the disk surface

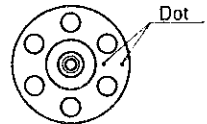

Dot

Winding stem screw
 ☆ 012244 Used for the case having an outside diameter of 57.00φ mm.
 ☆ 012272 Used for the case having an outside diameter of 48.00φ mm.

Catalog No.

Calibre No.	Jewels	Style Name
8800F	7j	
⇒ Basic Calibre 8800B 7J Catalog No. 88-00-1		
PART NO.	LIST OF MATERIALS	PART NO. LIST OF MATERIALS
112012	Barrel & train-wheel bridge	☆012244 } Winding stem screw
151001	Escape wheel bridge	☆012272 } Escape wheel bridge screw
161003	Pallet cock	012275 } Pallet cock screw
171028	Balance cock	012275 } Second-setting lever screw
197001	Winding stem cock	012311 } Pillar wheel screw
205007	Complete barrel with arbor	012345 } Hammer spring screw
213005	Barrel arbor	012349 } Ratchet wheel screw
221006	Center wheel & pinion	012350 } Winding stem cock screw
231004	Third wheel & pinion	012351 } Barrel & train-wheel bridge screw
241008	Fourth wheel & pinion	012351 } Balance cock screw
251011	Escape wheel & pinion	012352 } Balance stop lever screw
283003	Winding pinion	012353 } Balance stop lever spring screw
285012	Ratchet wheel	012353 } Fly-back lever screw
286002	Sliding crown wheel	012420 } Dial screw
301008	Jewelled pallet fork & staff	012664 } Click screw
310017	Balance complete with stud	012665 } Heart spring screw
315006	Balance staff	012730 } Casing clamp screw
331004	Roller with jewel	012731 } Hammer guard screw (Chamfer-head screw)
341006	Regulator	012732 } Operating lever guard screw
345006	Stud holder	012733 } Operating lever spring guard screw
☆351048 } Winding stem		013107 } Tube for balance stop lever screw
☆351049 } Crown wheel guard		013120 } Tube for balance stop lever spring screw
362002 } Sliding crown wheel spring		013120 } Tube for hammer spring screw
381003 } Click		013120 } Tube for fly-back lever screw
382901 } Click spring		013120 } Tube for fly-back lever spring screw
391004 } Second-setting lever		013120 } Tube for operating lever spring guard screw
399005 } Casing clamp		013177 } Tube for barrel & train-wheel bridge screw (short)
401905 } Mainspring (self-greasing)		013178 } Tube for barrel & train-wheel bridge screw (Operating lever spring pin)
☆492001 } Balance cock washer		013179 } Tube for escape wheel bridge screw
☆492002 } Minute heart		013179 } Tube for pallet cock screw
☆492003 } Minute heart spring		013180 } Tube for balance cock screw
562001 } Second heart		013181 } Tube for winding stem cock screw (short)
563901 } Second heart spring		013182 } Tube for crown wheel guard screw
565001 } Operating lever		013183 } Tube for dial screw
566002 } Operating lever spring		013184 } Tube for hammer guard screw
571004 } Pillar wheel		013185 } Tube for pillar wheel screw
575002 } Pillar wheel ring		013188 } Tube for winding stem cock screw (long)
576002 } Pillar wheel jumper		013188 } (Tube for operating lever spring guard screw)
577001 } Balance stop lever		013189 } Tube for barrel & train-wheel bridge screw (Tube for crown wheel guard screw)
578003 } Balance stop lever spring		
581004 } Hammer		
584002 } Hammer spring		
585002 } Fly-back lever		
586003 } Operating lever guard		
587002 } Hammer guard		
650002 } Operating lever spring guard		
663002 } Adjustment disk of hammer		
664001 } Diashock upper frame		
☆715001 } Diashock lower frame		
☆715002 } Diashock hole jewel with frame		
014803 } Diashock cap jewel		
014804 } Diashock spring		
014815 } Stud screw		
011214 } Screw for adjustment disk of hammer		
014807 } Crown wheel guard screw		
012105 } Pillar wheel jumper screw		
012127 } Hammer guard screw (Cheese-head screw)		
012223 } Hammer guard screw (Cheese-head screw)		
012223 } Hammer guard screw (Cheese-head screw)		
012223 } Hammer guard screw (Cheese-head screw)		

As for all other parts not shown here, please refer to the basic calibre

(Cal. No. **8800B** 7J Catalog No. 88-00-1 Violet page).

☆ ⇒ Please see remarks on the front page.

Items in light letters are not shown in photos; those parts are interchangeable with the basic calibre

(Cal. No. **8800B** 7J Catalog No. 88-00-1 Violet page).