SEIKO

DIGITAL QUARTZ

Cal. B337A

PARTS LET

Cal. B337A







354 850



4001 560



4216 562



4225 566



4245 560





4270 560



4313 560

4313 561



4398 560



4408 560



4408 561



4410 560



4450 845



4457 560



☆4510 690



4521 820



☆ Maxell SR721W



 $\frac{2}{1}$

Cal. B337A

Characteristics

Casing diameter:

 ϕ 18.0 mm

Maximum height:

46 mm

Frequency of quartz crystal oscillator: 32,768 Hz (Hz=Hertz.... Cycles per second)

Time display: 12 hour Digital Display System showing hour, minute, second and P.M. (A.M. is not displayed)

Calendar display: Digital Display System showing month and date. Alarm display: Can be set to operate at any desired hour and minute.

Timer display: Can be set one minute up to 60 minutes. Time signal: Can be set to ring every hour on the hour. Display medium : Nematic Liquid Crystal, FE-Mode. Regulation system: Electronic regulating by crown

Battery life indicator: All the digits in the display begin flashing.

PART NO.	PART NAME	PART NO.	PART NAME
354 850 4001 560 4216 562 4225 566 4245 560 4246 560 4270 560 4295 845 4313 560	Winding stem Circuit block Insulator for battery Battery clamp Switch spring Buzzer lead terminal Battery connection (-) Switch cam Connector A		
4313 561 4398 560 4408 560 4408 561 4410 560 4450 845 4457 560 \$\approx 4510 690 \$\approx 4510 691 \$\approx 4510 692 4521 820 022 484 022 484	Connector B Liquid crystal panel frame Switch lever spacer Reflecting mirror spacer Circuit cover Switch lever Circuit block cover Liquid crystal panel (Silver) Liquid crystal panel (Gold) Liquid crystal panel (Blue) Reflecting mirror Battery clamp screw Screw for circuit block cover		
∵ Maxell SR721W	Silver oxide battery		

Remarks:

Liquid crystal panel

☆4510 690(Silver) \$4510 691 (Gold) ☆4510 692(Blue) Be sure that the combination between the color of panel cover and liquid crystal panel should be matched according to the "SEIKO Quartz Casing Parts List".

Battery

☆ Maxell SR721W······The substitutive battery might be added to the applied battery in the future. In that case, please refer to separate "BATTERY LIST FOR SEIKO QUARTZ WATCHES".

TECHNICAL GUIDE

SEIKO DIGITAL QUARTZ

CAL. B337A






CONTENTS

1.	SPECIFICATIONS	1		
11.	STRUCTURE OF THE CIRCUIT BLOCK			
Ш.	DISPLAY FUNCTION	2		
IV.	REMARKS FOR BATTERY CHANGE	2		
V.	DISASSEMBLING, REASSEMBLING AND LUBRICATING	3		
	Disassembling, reassembling and lubricating of the case	3		
	2. Disassembling, reassembling and lubricating of the module	4		
	Relationship between the segment (Liquid Crystal Panel Electrode) and the C-MOS-LSI output terminal	5		
VI.	CHECKING AND ADJUSTMENT	6		
	Check battery voltage	6		
	Check battery conductivity	6		
	Check current consumption	6		
	Check water resistance	7		
	Check contact between C-MOS-LSI and liquid crystal panel	7		
	Check liquid crystal panel and circuit block	7		
	Check accuracy	7		
	Check functioning and adjustment	8		
	Check conductivity of switch components	8		
	Check alarm condition	8		
	Check functioning	Ω		

I. SPECIFICATIONS


Item Cal. No.	В337А
Display medium	Nematic Liquid Crystal, FEM (Field Effect Mode)
Liquid crystal driving system	Multiplex driving system
Display system	 Time function Calendar function Alarm function Timer function
Additional mechanism	 Battery life indicator Time signal Pattern segment checking system
Loss/gain	Loss/gain at normal temperature range Monthly rate: less than 15 seconds (Annual rate: less than 3 minutes)
Outside diameter	φ 18.0 mm
Height	4,6 mm
Regulation system	Electronic regulating by crown
Measuring gate by Quartz Tester	The gate of 10 seconds is available.
Battery	Maxell SR721W Battery life is approximately 2 years. Voltage: 1.55V

II. STRUCTURE OF THE CIRCUIT BLOCK

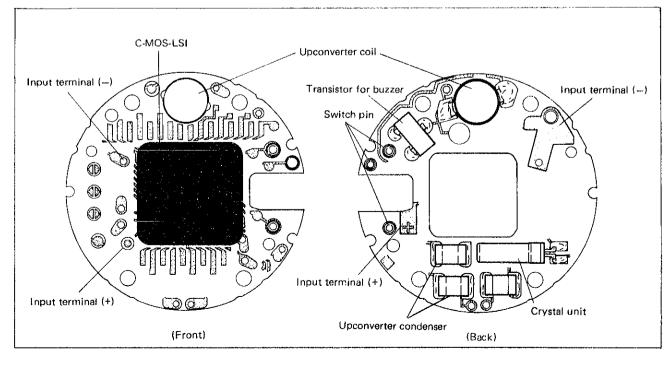


1

III. DISPLAY FUNCTION

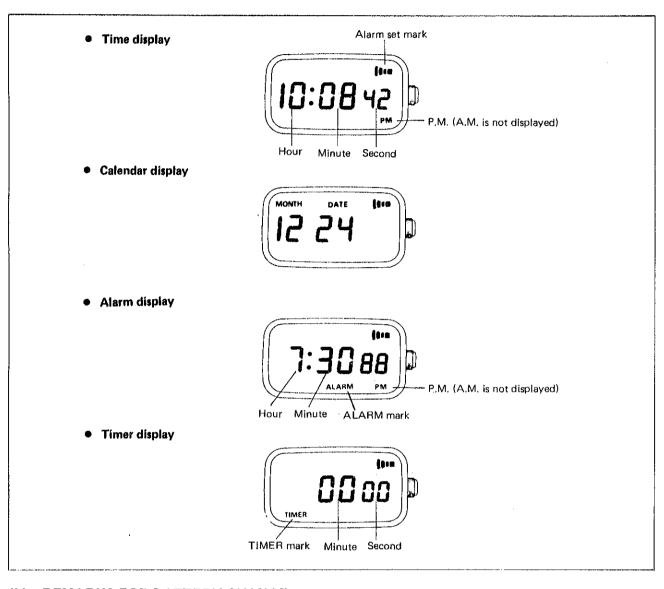

IV. REMARKS FOR BATTERY CHANGE

The SEIKO watch of Cal. B337A may show the faulty condition only when the battery is replaced. Be sure to follow the instruction below and correct it when replacing the battery.

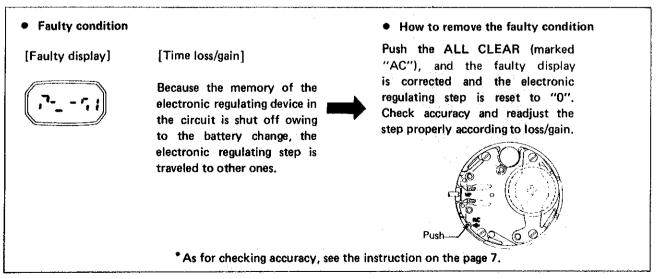

V. DISASSEMBLING, REASSEMBLING AND LUBRICATING


1. Disassembling, reassembling and lubricating of the case

◆ Disassembling procedures Figs. : (1) → (9)

• Reassembling procedures Figs. : 9 --- 1

• Lubricating • Silicone grease 500,000 c.s.


SEIKO Watch Oil S-6

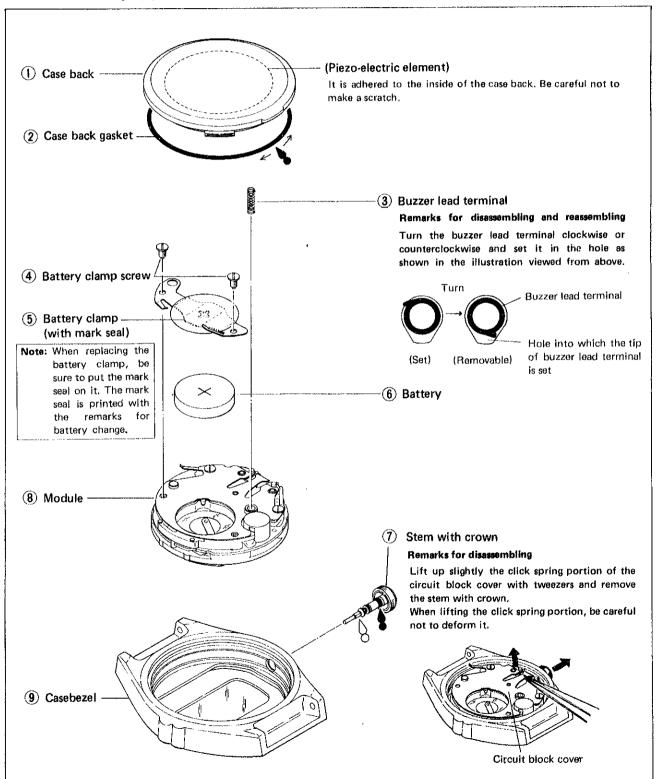

2. Disassembling, reassembling and lubricating of the module

• Disassembling procedures Figs. : (1) ------ (6)


• Reassembling procedures Figs. : (6) ------ (1)

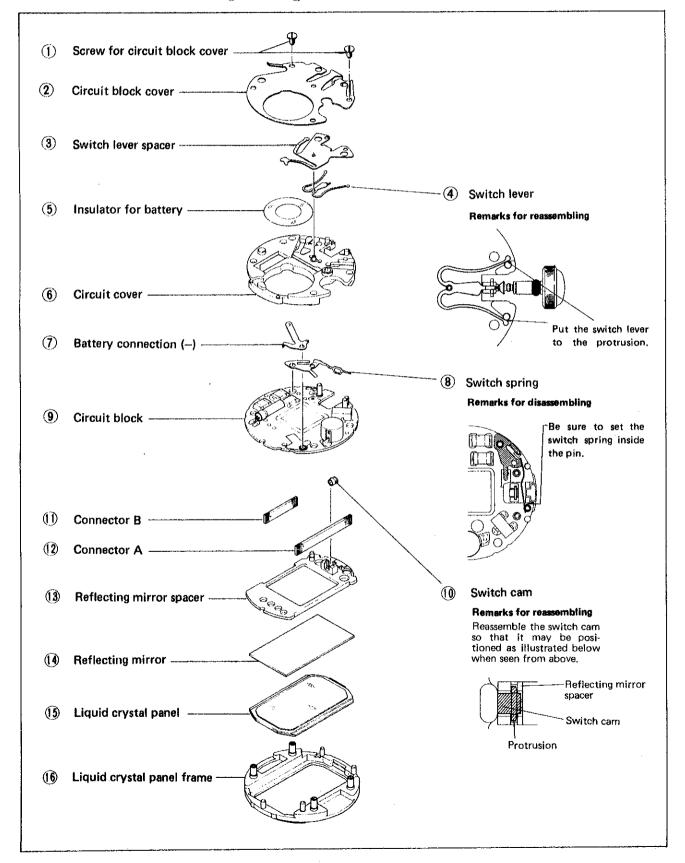


3. Relationship between the segment (Liquid Crystal Panel Electrode) and the C-MOS-LSI output terminal

A complete knowledge of how the segment (Liquid Crystal Panel Electrode) works with the C-MOS-LSI output terminal will provide the proper procedures for checking and adjustment.

• Designation of segment

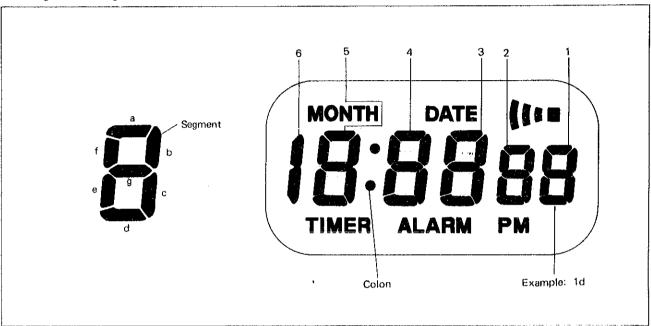

• Relationship between the segment (Liquid crystal panel electrode) and the C-MOS-LSI output terminal

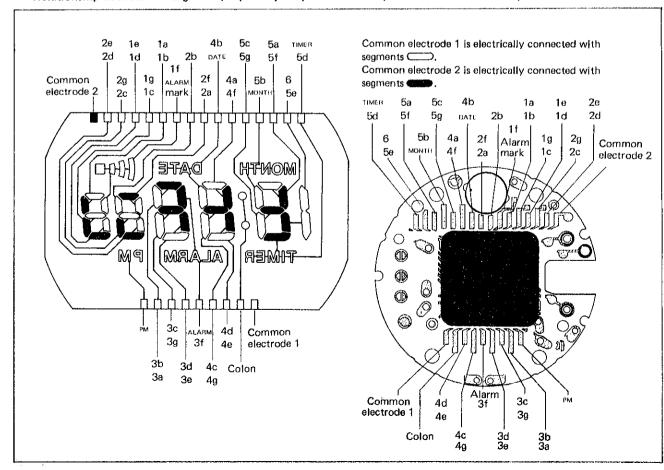

VI. CHECKING AND ADJUSTMENT

 Refer to the "SEIKO QUARTZ TECHNICAL GUIDE, GENERAL INSTRUCTION" for digital watches for details.

Procedure

CHECK BATTERY VOLTAGE

Result: More than 1.5 V:

Normal

Less than 1.5V:

Defective


Defective

CHECK BATTERY CONDUCTIVITY


CHECK CURRENT CONSUMPTION

- 1. Current consumption for the whole of the module
- It is possible to check the current consumption in any of the functions,

Result: Less than 1.5 μ A: Normal More than 1.5 μ A:

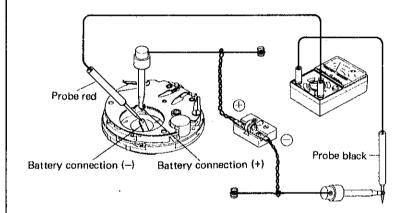

2. Current consumption for the circuit block alone

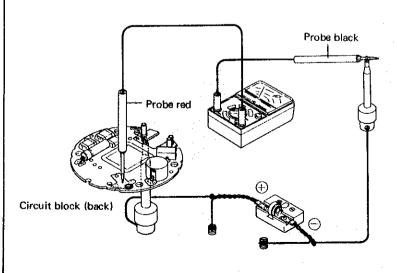

Result: Less than 1.0 μA:
Normal
More than 1.0 μA:
Defective


Procedure

CHECK WATER RESISTANCE

CHECK CONTACT BETWEEN C-MOS-LSI AND LIQUID CRYSTAL PANEL

CHECK LIQUID CRYSTAL PANEL AND CIRCUIT BLOCK

- Check the liquid crystal panel
- Check the output voltage of the circuit block

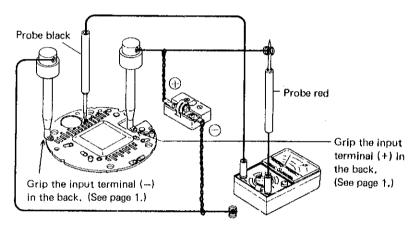

CHECK ACCURACY

Daily rate measuring

- Set the measuring gate at "10 seconds".
- To measure the daily rate, use the electric-field detection microphone for digital watches or the electromagnetic/electric-field detection microphone (DM-1).
- Check accuracy in the daily rate measuring function with all the segments displayed.
 Be careful not to check the daily rate in the time setting function because a wrong value will be given.
 To light up all the segments perform the following procedure within 1 ~ 2 seconds.
 (With the crown at the normal position, turn it clockwise more than one turn, and turn it counterclockwise as much and pull it out.)

Time accuracy adjusting

For time accuracy adjustment, a new type of "Electronic Regulating by Crown" is used in Cal. B337A. As the different time accuracy adjustment is necessary, follow the procedures below.

- With all the segments displayed, turn the crown clockwise or counterclockwise and the electronic regulating device is activated. (The regulating step is displayed.)
- Turn the crown clockwise (Gain) or counterclockwise (Loss) and adjust the time accuracy. Every 1-step of the regulating step will make a change of about 0.26 second fast or slow per day.

The regulating step and adjustment volume change as shown on the next page.



All segments displayed

Electronic regulating device is activated and regulating step is displayed.

0

Procedure a) Turn the crown clockwise (Gain). Regulating step The step indication will not change even if the crown is b) Turn the crown counterclockwise (Loss). turned any more. Regulating step -3 The step indication will not change even if the crown is turned any more, c) The table shows the adjustment volume at each step from the step "0". 2 3 Loss/gain to be adjusted Daily rate --0.791 -0,527 -0.2640 +0.264 +0.527 +0.791 (Second) Monthly rate --16 -8 0 +16 +24 +8 (Second) Suppose the regulating step is set at "0" and the monthly rate is +10 seconds, change the regulating step to "-1" and the monthly rate will become +2 seconds. **CHECK FUNCTIONING AND ADJUSTMENT CHECK CONDUCTIVITY OF SWITCH COMPONENTS CHECK ALARM CONDITION** • Check the contact (between the piezo-electric element and the buzzer lead terminal). • Check the resistance for the upconverter coil and check it for any broken wire and short circuit. Range to be used: R x 1 Result: $45\Omega \sim 70\Omega$: Normal Less than 45Ω (Short circuit) → Defective More than 70Ω (Broken wire)

All Procedures of Disassembling, Reassembling, Checking and Adjustment are completed.

c

CHECK FUNCTIONING